

-- : FBI ERROR CODE

÷ãäé àøáo ñòðç ÷ääé FBI
00RCVB26=L0--BAD DATA
00LINE11=L1--LINE FAULT NO:1
00LINE12=L2--LINE FAULT NO:2
00LINE13=L3--LINE FAULT NO:3
00LINE14=L4--LINE FAULT NO:4
00LINE15=L5--LINE FAULT NO:5
00LINE16=L6--LINE FAULT NO:6
00LINE17=L7--LINE FAULT NO:7
00LINE18=L8--LINE FAULT NO:8
00LINE31=R1--LINE FAULT RESTORE NO:1
00LINE32=R2--LINE FAULT RESTORE NO:2
00LINE33=R3--LINE FAULT RESTORE NO:3
00LINE34=R4--LINE FAULT RESTORE NO:4
00LINE35=R5--LINE FAULT RESTORE NO:5
00LINE36=R6--LINE FAULT RESTORE NO:6
00LINE37=R7--LINE FAULT RESTORE NO:7
00LINE38=R8--LINE FAULT RESTORE NO:8
00RCVB16=L9--NO TRANSMISSION
00RCVB51=LA--LINE CARD INOPERATIVE NO:1
00RCVB52=LB--LINE CARD INOPERATIVE NO:2
00RCVB53=LC--LINE CARD INOPERATIVE NO:3
00RCVB54=LD--LINE CARD INOPERATIVE NO:4
00RCVB55=LE--LINE CARD INOPERATIVE NO:5
00RCVB56=LF--LINE CARD INOPERATIVE NO:6
00RCVB57=LG--LINE CARD INOPERATIVE NO:7
00RCVB58=LH--LINE CARD INOPERATIVE NO:8
00RCVB71=La--LINE CARD OPERATIVE NO:1
00RCVB72=Lb--LINE CARD OPERATIVE NO:2
00RCVB73=Lc--LINE CARD OPERATIVE NO:3
00RCVB74=Ld--LINE CARD OPERATIVE NO:4
00RCVB75=Le--LINE CARD OPERATIVE NO:5
00RCVB76=Lf--LINE CARD OPERATIVE NO:6
00RCVB77=Lg--LINE CARD OPERATIVE NO:7
00RCVB78=Lh--LINE CARD OPERATIVE NO:8
00RCVA15=S1--AC POWER FAIL

00RCVA35=S2--AC POWER RESTORE
-------------------------------

00RCVB04=S3--AUTOMATIC MODE
-----------------------------

pageNo:-> 1

-- FBI ERROR FILE

÷ãé àøàò ïòòðç ÷ãé FBI
------------------------

00RCVA16=S4--BATTERY LOW FAIL
-------------------------------

00RCVA36=S5--BATTERY LOW RESTORE
----------------------------------

00RCVB03=S6--BATTERY TEST FAIL
--------------------------------

00RCVB05=S7--BATTERY TEST RESTORE
-----------------------------------

00RCVB44=S8--CHECK PARAMETERS
-------------------------------

00RCVA11=S9--COMPUTER FAIL
----------------------------

00RCVA31=SA--COMPUTER RESTORE
-------------------------------

00RCVB02=SB--MANUEL MODE
--------------------------

00123417=SC--OPERATOR LOG ON
------------------------------

00123427=SD--OPERATOR LOG OFF
-------------------------------

00RCVA14=SE--PRINTER FAIL
---------------------------

00RCVA34=SF--PRINTER RESTORE
------------------------------

00RCVA01=SG--SYSTEM RESET
---------------------------

CountLine:-> 50

*ofir SoftWare -050-5305930: .... - updated 01/08/2011 12:05:08*